



## ENGLISH

### ELECTRIC KETTLE VT-7068

The liquid heating appliance (kettle) is intended for boiling drinking water only.

#### DESCRIPTION

1. Kettle body
2. Kettle spout
3. Lid
4. Kettle lid handle
5. Water level scale
6. ON/OFF button
7. Base
8. Cord storage
9. Thermometer

#### NOTES:

- Before using the kettle, make sure that the on/off button (6) is not blocked by any foreign objects and the lid (3) is tightly closed, otherwise the switch off of the kettle is not possible.
- Before removing the kettle from the base, make sure that the kettle is switched off (the on/off button (6) is in the upper position).

#### ATTENTION!

- To avoid burns by hot steam, do not bend over the kettle spout (2) while it is operating.

#### USAGE

Make sure that the on/off button (6) is in the upper position, that means that it is off.

Insert the power cord into the mains socket.

To fill the kettle with water, take it off the base (8), open the lid (3), take the handle (4) and pull it upwards.

Fill the kettle with water not below the minimal mark «MIN» and not above the maximal mark «MAX». Determine the water level using the water level scale (5).

Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

Use the unit for its intended purpose only and in strict accordance with the instruction manual.

Make sure that your home mains voltage corresponds to the voltage specified on the unit body.

If it is equipped with a «europlug», plug it into the socket which indicates the water temperature.

To avoid risk of fire, do not use adaptors for connecting the kettle to the mains.

When removing the kettle from the base (8), make sure that it is switched off (the button (6) is in the upper position).

Do not use the kettle in bathrooms. Do not use it near swimming pools or other containers filled with water.

Do not use the kettle near heat sources or open flame.

Do not use the unit in places where aerosols are sprayed or highly flammable liquids are used.

Do not leave the operating kettle unattended.

Place the kettle on a flat stable surface; do not place the kettle on the edge of the table.

Do not direct the kettle spout at wooden furniture, electrical appliances, books and objects which can be damaged by moisture, hot steam.

Before switching the kettle on, make sure that it is placed on the base evenly.

Use only the base supplied with the unit.

Do not let the power cord hang over the edge of the table and make sure that it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

Do not touch the power cord and the power plug with wet hands.

Keep the kettle filter clean and clean it from time to time. To remove the filter remove the lid (3), turn the kettle with the handle towards you; there is a clamp in the center of the filter, press on it and remove the filter.

Clean the filter from mineral deposits and install it back to its place, first install the bottom part of the filter, then press on the upper part of the filter until fixing.

Do not immerse the kettle and the base into water or any other liquids.

Do not wash the kettle and the base in a dishwashing machine.

#### Descaling

Scale, appearing inside the kettle, influences the water taste and distorts the heat exchange between water and the heating element.

To remove scale, fill the kettle with water by about 75% and then boil the water up. Fill the remaining quarter of the flask with vinegar (6-8%) and leave the liquid in the kettle overnight (for approximately 8 hours). In the morning pour the vinegar mixture out of the kettle and rinse the flask several times. To remove the remaining vinegar and its smell, boil the kettle filled with vinegar once or twice.

If necessary, repeat the cleaning cycle.

You can use special detergents for electric kettles to remove scale, strictly following the instruction.

Clean the kettle from scale regularly.

#### CLEANING AND CARE

Before cleaning disconnect the unit from the mains, pour out water and let the kettle cool down.

Clean the exterior of the kettle with a damp cloth or a sponge and then wipe it dry. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

Do not switch the kettle on if it is empty.

Do not fill the kettle with water when it already stands on the base.

Do not use the kettle if the lid is not closed tightly.

Take the kettle off the base before opening the lid.

Use the kettle only for boiling drinking water, do not heat or boil any other liquids.

Ensure that the water level in the kettle is not below the minimal mark «MIN» and not above the maximal mark «MAX». If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

To avoid burns by hot steam, do not bend over the kettle spout while it is operating.

Do not open the kettle lid while water is boiling.

Be careful while carrying the kettle filled with boiling water.

Do not remove the operating kettle from the base. If you need to take the kettle off, switch it off first, setting the on/off button to the upper position and then remove it from the base.

Unplug the kettle base before cleaning and when you are not using the kettle. Never pull the power cord when disconnecting the kettle from the mains; take the power plug and carefully remove it from the mains socket.

To avoid electric shock, do not immerse the unit and the base into water or any other liquids.

Do not wash the kettle and base in a dishwashing machine.

This unit is not intended for usage by children.

Place the unit out of reach of children during the operation and cooling down.

Do not allow children to touch the unit body and the power cord during the operation.

Keep the kettle in a dry cool place away from children and disabled persons.

#### DELIVERY SET

Electric kettle – 1 pc.

Base – 1 pc.

Instruction manual – 1 pc.

#### TECHNICAL SPECIFICATIONS

Nominal voltage: 220-240 V ~ 50 Hz

Rated input power: 1650-2200 W

Maximum water capacity: 1.6 L

#### RECYCLING

For environment protection do not throw out the unit and the batteries when they have reached their service life expiration; apply to the specialized center for further recycling.

The waste generated during the disposal of the unit is subject to mandatory collection and consequent disposal in the prescribed manner.

For further information about recycling of this product apply to a local municipal administration, a disposal service or to the shop where you purchased this product.

#### BEFORE THE FIRST USE

After unit transportation or storage at low temperature keep it for at least three hours at room temperature before switching on.

There are no spots in the kettle, this is normal, as the unit undergoes factory quality control.

Unpack the kettle and remove any packaging materials that can prevent unit operation.

Check the unit for damages; do not use it in case of damages.

Make sure that the unit operating voltage corresponds to the voltage of your mains.

Make sure that the unit is switched off (that means the on/off button (6) is in the upper position).

Insert the power plug into the mains socket.

Turn the kettle with water take it off the base (8), open the kettle lid (3), turn the handle (4) and pull it upwards.

Fill the kettle with water up to the maximal mark «MAX», determine the water level using the scale (5).

Close the kettle lid (3), place the kettle on the base (8). Make sure that the kettle lid (3) is closed tightly.

**CE** This product conforms to the EMC Directive 2014/30/EU and to the Low Voltage Directive 2014/35/EU.

